


Your Phoenix hand held shower kit includes a flow controller. Installing it is optional. If you want to control the flow of water or reduce flow to a trickle to conserve water, you must install the flow controller:

1. Attach hose to shower arm.
2. Screw flow controller into the other end of the hose.
3. Screw shower head into the other end of the flow controller.

Flow controller operates by turning it to the left or right. It will not shut the water flow off completely.

Remember to shut the water off with the handle when done.

I-360-16 r7-12

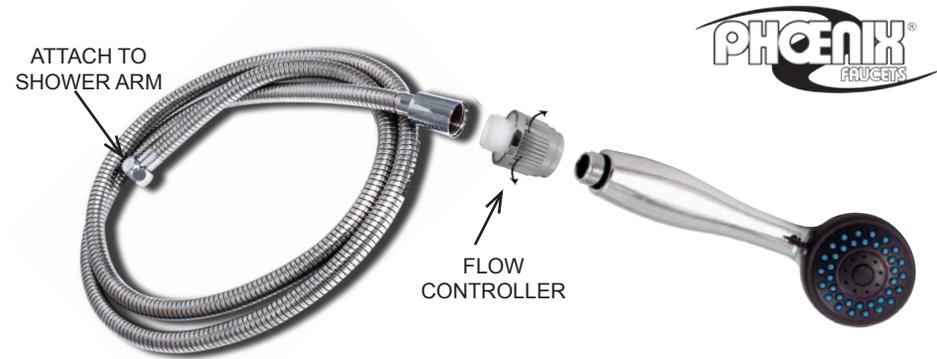

Your Phoenix hand held shower kit includes a flow controller. Installing it is optional. If you want to control the flow of water or reduce flow to a trickle to conserve water, you must install the flow controller:

1. Attach hose to shower arm.
2. Screw flow controller into the other end of the hose.
3. Screw shower head into the other end of the flow controller.

Flow controller operates by turning it to the left or right. It will not shut the water flow off completely.

Remember to shut the water off with the handle when done.

I-360-16 r7-12




Your Phoenix hand held shower kit includes a flow controller. Installing it is optional. If you want to control the flow of water or reduce flow to a trickle to conserve water, you must install the flow controller:

1. Attach hose to shower arm.
2. Screw flow controller into the other end of the hose.
3. Screw shower head into the other end of the flow controller.

Flow controller operates by turning it to the left or right. It will not shut the water flow off completely.

Remember to shut the water off with the handle when done.

PFI-360-16 r7-12

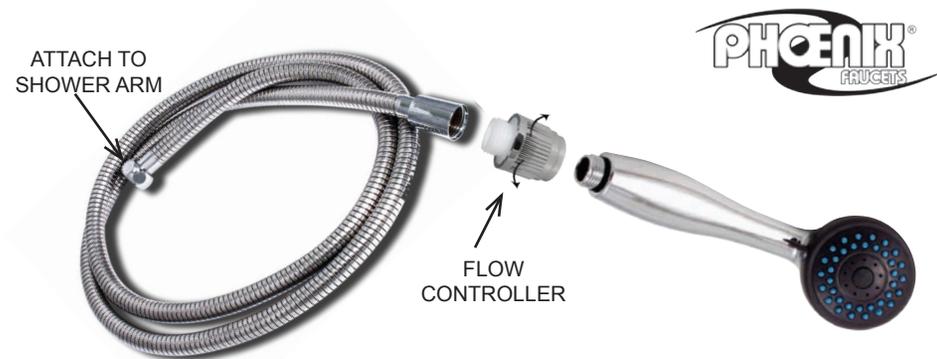

Your Phoenix hand held shower kit includes a flow controller. Installing it is optional. If you want to control the flow of water or reduce flow to a trickle to conserve water, you must install the flow controller:

1. Attach hose to shower arm.
2. Screw flow controller into the other end of the hose.
3. Screw shower head into the other end of the flow controller.

Flow controller operates by turning it to the left or right. It will not shut the water flow off completely.

Remember to shut the water off with the handle when done.

I-360-16 r7-12