


RV ENTRANCE DOOR

Interior Window Frame

A77010 - A77011

A77012 - A77013

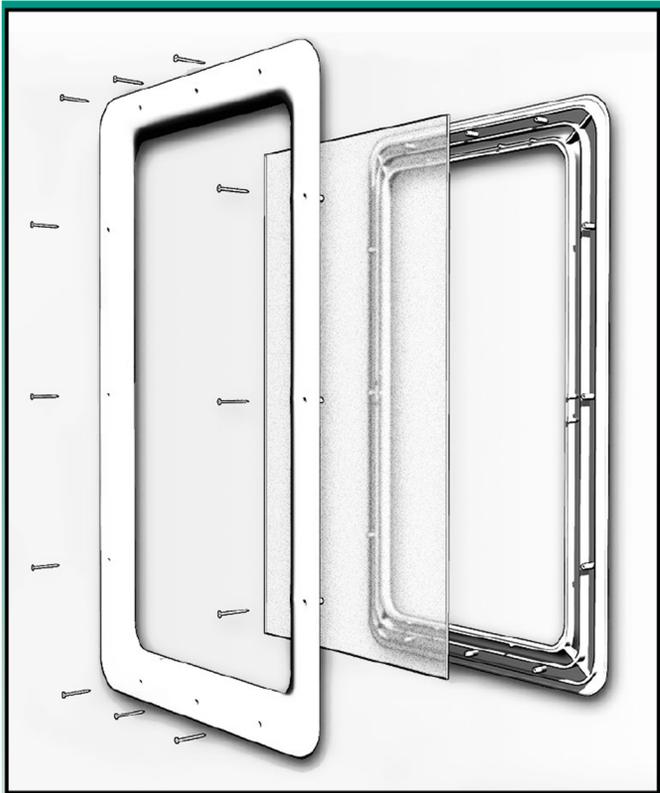

INSTALLATION INSTRUCTIONS

Note: Glass window is held in position by frames only. Exercise caution during dismantling process. Avoid sharp edges on glass.

To remove old frame:

1. Remove the 12 screws on the interior frame and gently pull frame back, being careful not to let the glass fall out.
2. Before removing the exterior frame, use a razor knife to cut a slit in any existing silicone or putty, being careful not to cut or puncture the exterior skin of the door.
3. Gently remove exterior frame. Use caution if glass is still in place.
4. After both frames have been removed, clean the door surface and the glass surface of all sealants and adhesives.

To install new frame:

1. Apply a layer of putty or butyl tape around the outer perimeter of exterior frame on the side that will be flush against door. (Exterior frame does not have screw holes.)
2. Apply a light bead of silicone sealant around the interior perimeter of the exterior frame where glass sits on frame and mount glass to frame.
3. Carefully mount exterior frame to door. Position interior frame so that screw holes are aligned. (Silicone sealant may be applied to interior perimeter of interior frame prior to mounting.)
4. Insert screws and tighten, being careful not to over-tighten.
5. Carefully trim away excess putty and/or silicone sealant.

It is strongly recommended that both interior and exterior frames be replaced at the same time.

INSTRUCTIONS EN FRANÇAIS AU VERSO

INSTRUCTIONS D'INSTALLATION

Remarque : La fenêtre en vitre est maintenue en place par les cadres seulement. Soyez prudent durant le processus de démontage. Évitez les rebords tranchants de la vitre.

Pour retirer l'ancien cadre :

1. Retirer les 12 vis du cadre intérieur et tirer doucement le cadre, en prenant soin de ne pas laisser la vitre tomber.
2. Avant de retirer le cadre extérieur, utiliser un couteau utilitaire pour faire une petite entaille dans le silicone ou le mastic en place, en prenant soin de ne pas couper ni perforer la membrane extérieure de la porte.
3. Retirer doucement le cadre extérieur. Faire attention si la vitre est toujours en place.
4. Une fois les deux cadres retirés, nettoyer la surface de la porte et la surface de vitre pour enlever tous les débris de scellant et d'adhésif.

Pour installer le nouveau cadre :

1. Appliquer une couche de mastic ou de ruban de butyle autour du périmètre externe du cadre extérieur sur le côté qui sera affleuré contre la porte. (Le cadre extérieur n'a pas de trous de vis.)
2. Appliquer une mince couche de scellant de silicone autour du périmètre intérieur du cadre extérieur où la vitre repose sur le cadre, puis installer la vitre sur le cadre.
3. Installer doucement le cadre extérieur sur la porte. Positionner le cadre intérieur de sorte que les trous de vis soient alignés. (Le scellant de silicone peut être appliqué sur le périmètre intérieur du cadre intérieur avant l'installation.)
4. Insérer les vis et visser, en prenant soin de ne pas trop les serrer.
5. Couper doucement le surplus de mastic ou de scellant de silicone.

Il est fortement recommandé de remplacer les cadres extérieur et intérieur au même moment.