


VALTERRA UNIVERSAL VENT LID INSTALLATION INSTRUCTIONS

(A10-3375 white, A10-3376 smoke)

Step 1: Begin inside the RV

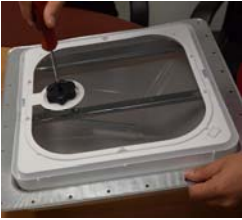

UNSCREW THE HANDLE/CRANK



REMOVE THE HANDLE/CRANK



REMOVE SCREEN (UNSCREW/UNCLIP)



REMOVE SCREWS CRANK MECHANISM



REMOVE CRANK ARM


Step 2: Move to the top of the RV




OPEN LID AND REMOVE FROM EXISTING HINGE



NOTE: MOST LIDS USE THE ATTACHED METAL BRACKET

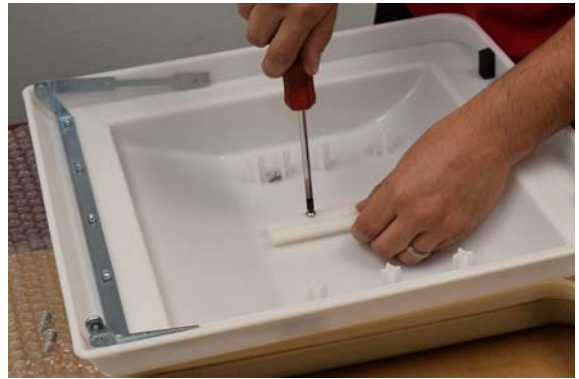

NOTE: THIS LID USES A SLIDER, SO WE'RE INSTALLING THE PROVIDED PLASTIC SLIDER

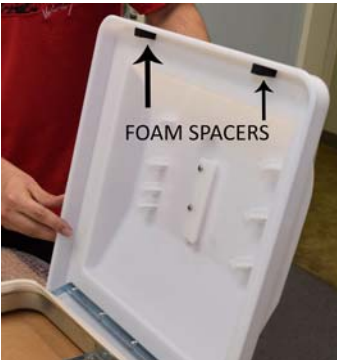

THESE ARE THE BLACK FOAM SPACERS



PUT LID ON AND PUSH BACK ON THE BLACK FOAM SPACERS




CENTER LID FROM SIDE TO SIDE



HOLD HINGE HORIZONTAL AND MARK HOLES



DRILL HOLES WHERE MARKS ARE

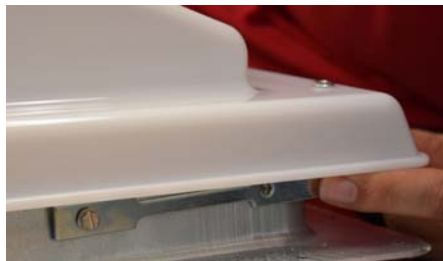

SECURE WITH PROVIDED SCREWS



REMOVE FOAM SPACERS

Step 3: Finish from inside the RV



SLIDE CRANK ARM THROUGH BRACKET AND ATTACH TO LID



INSTALL SCREWS



ATTACH SCREEN



ATTACH HANDLE/CRANK



ALL DONE!